

Log Periodic Outdoor Antenna Pole Mount Instructions


Parts Included



Assembly

1 Attach the L-Bracket to the antenna

Tighten the bolt assembly securely. The large flat & small lock washer are captive – they will not fall off the bolt.

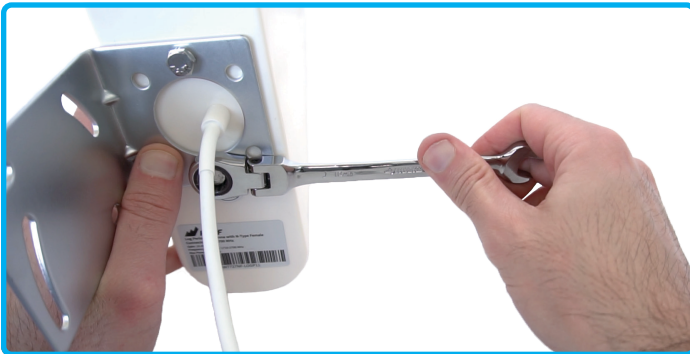

2 Position clamps and U-bolts

Slide both U-bolts through the clamp and the L-bracket.



3 Secure with washers and bolts

Place large washer and small locking washer onto each U-bolt, and tighten evenly across all bolts until the bracket is secure.



4 Done!

